

**DAB+ Camping Radio  
DR 114**



**Manual**

**English**

## Table of contents

1. First steps .....	17
2. Basic functions .....	17
3. Scope of delivery .....	17
4. Radio controls.....	18
5. Standby mode .....	21
6. Mode selection .....	21
7. DAB+ digital radio mode .....	21
7.1. DAB+ station search.....	22
7.2. Station list.....	22
7.3. Saving / recalling a favourite stations .....	22
7.4. DAB menu .....	22
8. FM radio mode .....	22
8.1. FM station search.....	22
8.2. Setting the FM frequency manually .....	22
8.3. Saving / recalling a favourite stations .....	22
8.4. FM menu .....	23
9. Wireless music streaming (Bluetooth).....	23
10. System setup.....	23
10.1. Alarm .....	23
10.2. Backlight.....	23
10.3. Time setup .....	23
10.4. Language.....	23
10.5. Factory reset.....	23
10.6. Software Version .....	23
11. Battery charging.....	24
11.1. Solar panel.....	24
11.2. Hand crank .....	24
12. SOS emergency function.....	24
13. Torch.....	24
14. Technical data.....	25
15. Safety instructions .....	26
16. Troubleshooting .....	27
17. Warranty and recycling Information.....	27
17.1. Legal warranty for 2 years from the date of purchase .....	27
18. Electronic waste law and recycling.....	28
18.1. CE declaration of conformity .....	28
18.2. Notes on battery disposal.....	28
19. Service address and technical hotline .....	28

## 1. First steps

Thanks for purchasing the Albrecht DR 114 emergency radio.

Before you can start, you should fully charge the internal battery through the supplied USB-C charging cable. Connect it to any sufficient power source like a wall adapter, PC, laptop or similar.

Before use, fully extend the antenna for the best DAB+/FM radio reception. Long press the On/Off button  until the radio powers on. If you use the radio for the very first time, it will automatically perform a full scan of all available DAB stations and play the first station available.

## 2. Basic functions

- Short press the On/Off button  to switch between DAB, FM or Bluetooth mode.
- Save your favourite stations by long pressing the favourite  button.
- Adjust the volume by using the  and  buttons.
- In each menu you can confirm your selection by pressing the **OK** button.
- Enter the menu by long pressing the  button. Here you can find several functions related to the current mode, as well as the main menu, where you can set the alarm, select a language, adjust the backlight brightness and much more.



## 3. Scope of delivery

- ALBRECHT DR 114 emergency radio
- USB-C to USB-A charging cable
- Instruction manual




# 4. Radio controls

English

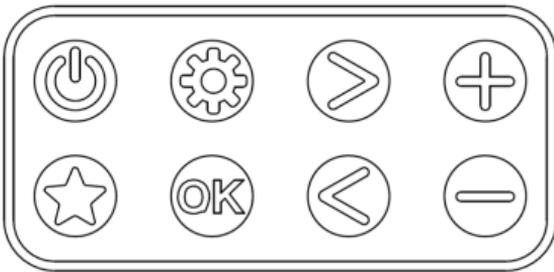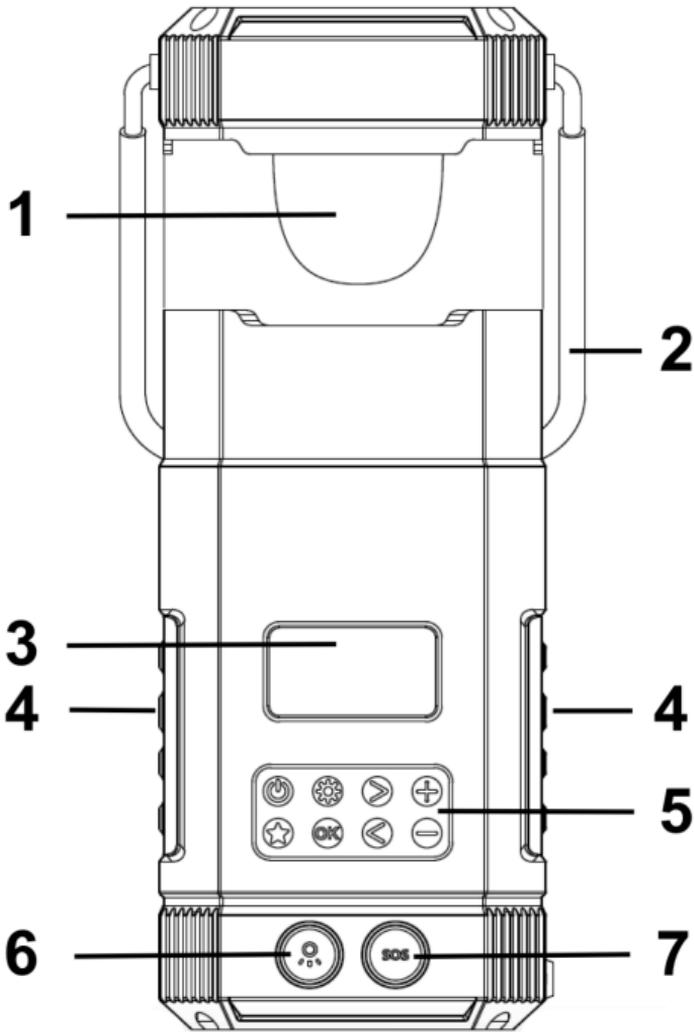

No.	Description	Function
1	Lantern	Extend the unit to use the lantern
2	Handle	You can use the handle to carry or hang the unit
3	Display	Shows information about the current station/song/artist
4	Speaker	Here are the two loudspeakers of the radio
5	Controls	The following buttons for operating the radio are located here:
	On/Off/Mode 	Short press: turn radio on / change mode (DAB / FM / Bluetooth) Long press: Standby mode / turn off completely when already in standby
	Favourites 	Short press: open a favourite radio station Long press: save current radio station to favourites
	Settings 	Short press: toggle radio text information Long press: enter menu
	Confirm 	Short press: confirm any selection in menus Long press: start full scan in DAB/FM
	Right 	DAB: next radio station FM: short press +0.05 MHz / long press: search for next station
	Left 	DAB: previous radio station FM: short press -0.05 MHz / long press: search for previous station
	Volume Up 	Increase the volume of the radio
	Volume Down 	Decrease the volume of the radio
6	Torch on/off Lantern on/off	Press to activate torch, press again to change torch If the unit is extended, the button activates the lantern
7	SOS button 	Press SOS button to play a loud siren sound and activate the emergency light

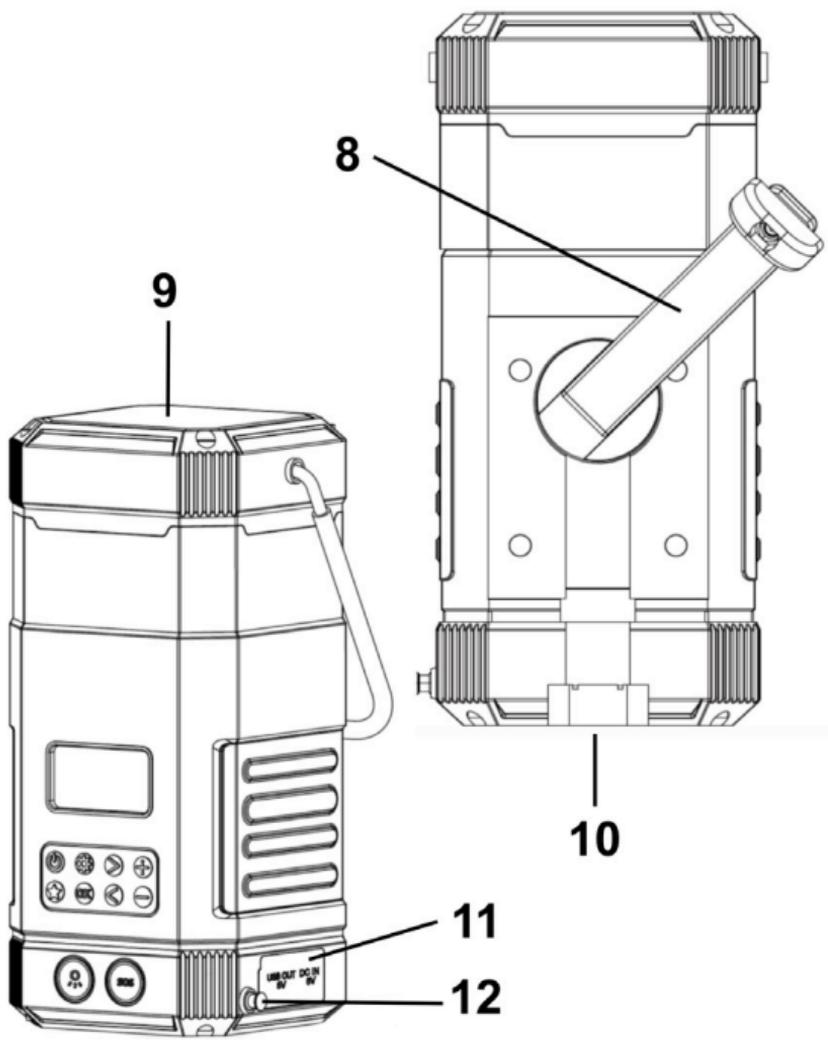

8	Hand crank	Twist hand crank to manually recharge the internal battery
9	Solar panel	Face the solar panel to the sun to recharge the radio
10	Torch / Emergency Light	Bright torch to use during night time Emergency light flashes if <b>SOS</b> button is pushed
11	Connectors	Close the cover when the connectors are not in use to ensure protection against dirt and moisture
	USB-C charging	Use to recharge the integrated battery of Albrecht DR 114
	USB output	Power bank function to charge any mobile device
	Reset button	Hard reset the radio in case of software error
	Charging Indicator	LED blinks red while charging and turns solid red when full
12	Antenna	Extend antenna to full length for best reception

## 5. Standby mode

To put the radio into standby mode, long press the On/Off button . To reactivate the radio, short press the On/Off button . To fully turn off the radio and preserve battery life, long press the On/Off button  again in standby mode. No alarms are available, when the radio is turned off completely.

In standby mode, press the settings button  to quickly view your currently set alarm settings, or press the **OK** button to quickly jump to the alarm settings wizard (see “10.1. Alarm” on page 23).

## 6. Mode selection

To select the desired audio mode, short press the mode button , while the radio is turned on. The available audio modes are:

- DAB+ digital radio
- FM analogue radio
- Bluetooth wireless audio

## 7. DAB+ digital radio mode

Use this mode to listen to digital radio broadcasts. You can cycle through available stations with the left  and right  buttons. To access more functions, open the menu by long pressing the settings button . Navigate the menu with the left  and right  buttons, and use the **OK** button to confirm. To exit the menu use the settings button  again.

### 7.1. DAB+ station search

The radio automatically performs a full station search when you turn it on for the first time.

If you would like to perform a full station scan again at a later time (e.g. after moving), press and hold down the **OK** button for approx. 2 seconds.

### 7.2. Station list

After the scan is complete, you can view all currently available stations in the station list, accessible in the menu. Navigate through the list with the left  and right  buttons and confirm your selection with **OK**.

### 7.3. Saving / recalling a favourite stations

If you want to save the current DAB+ station as a favourite, press the favourite  button for about 2 seconds.

To recall a favourite later, short press the favourite  button.

### 7.4. DAB menu

The DAB menu contains the following options:

- **Trim invalid stations:** Prune unavailable stations from station list.
- **Station order:** Sort stations in the station list by name or frequency.
- **DRC:** Adjust the level of the Dynamic Range Compression, reducing the volume differences between loud and quiet passages.
- **Manual tune:** Manually tune a DAB frequency.

## 8. FM radio mode

Use this mode to listen to analogue radio broadcasts. You can cycle through available stations by long pressing the left  and right  buttons. To access more functions, open the menu by long pressing the settings button . Navigate the menu with the left  and right  buttons, and use the **OK** button to confirm. To exit the menu use the settings button  again.

### 8.1. FM station search

To perform a full station scan, press and hold down the **OK** button for approx. 2 seconds. All found radio stations will be saved in the favourite station list.

### 8.2. Setting the FM frequency manually

Press the left  and right  buttons briefly to set an FM frequency manually. The frequency is adjusted in 0.05 MHz steps.

### 8.3. Saving / recalling a favourite stations

If you want to save the current FM station as a favourite, press the favourite  button for about 2 seconds.

To recall a favourite later, short press the favourite  button on the radio.

## 8.4. FM menu

Other menu items in the FM menu include:

- **Scan settings:** Restrict the full scan to strong stations only.
- **Audio settings:** Only allow mono stations to improve reception.

## 9. Wireless music streaming (Bluetooth)

A Bluetooth-enabled mobile phone can be used for wireless playback of any audio content. For this purpose, you need to activate the “Bluetooth” mode by pressing the mode button . Once this is done, search for “ALBRECHT DR 114” on your mobile device. For more details about operation of your mobile phone, please refer to the device’s manual.

## 10. System setup

You can find the system setup in the menu of every audio mode.

### 10.1. Alarm

Use this menu to configure the alarm function. Two separate alarms can be programmed. Each alarm can be repeated daily, on weekdays or on weekends. The alarms can play a standard alarm sound or the last set FM or DAB station.

### 10.2. Backlight

Use this entry to set the display backlight illumination level and timeout.

### 10.3. Time setup

Use this entry to set time/date, change the time or date format or configure automatic time setting via FM/DAB.

### 10.4. Language

Select one of the following menu languages:

English, German, French, Italian, Spanish, Dutch, Finnish, Polish

### 10.5. Factory reset

Reset the radio to factory settings.

**Attention:** All settings and favourites will be deleted by this procedure!

### 10.6. Software Version

The current software version of the radio is displayed here.

## 11. Battery charging

During the charging process, the charging indicator blinks red. As soon as the radio is fully charged, the charging indicator turns solid red.

**Attention!** Reception may be impaired during charging or when charging an external device via the USB-A output.

### 11.1. Solar panel

To recharge the radio, place the radio's solar panel directly into sunlight. Be careful to not shade any part of the solar panel. Even small shadows can drastically decrease the panel's performance. Artificial light sources mostly do not provide enough energy to charge the radio.

1 hour of solar charging can power the radio for about 20 minutes or the integrated torch for 1 hour.

### 11.2. Hand crank

To recharge the radio, extend the hand crank and turn it in either direction. For optimal charging, turn the crank at 120 - 150 rpm (2 - 2.5 times a second). 1 minute of turning can power the radio for about 3 minutes.

## 12. SOS emergency function

Use this function in an emergency to alert people near your location. To activate, long press the **SOS** button on the bottom of the radio. The radio will play a loud siren and flash a red and blue signal light.

**Attention:** The siren is very loud. Prolonged close range exposure can cause hearing damage. Try to set up the radio some distance away, when using the emergency function. Use of the emergency function drains the battery at an excessive rate.

## 13. Torch

To turn on the torch, press the  button on top of the radio. If you press the button a second time, the light flashes.

If the lantern is extended, the  button does not activate the torch, but the lantern light instead. This can be set to 3 different levels.

## 14. Technical data

Model number	Albrecht DR 114
Description	DAB+/FM radio
Speaker power	2x 7 Watt
FM	87.5 to 108.0 MHz
DAB+	174 – 240 MHz (Band III)
Bluetooth	Version 5.0 / range 10m
Bluetooth frequency / power	2.402 – 2.480 GHz; 1 mW
Charging input	USB-C / 5.0 V; 2 A
Charging output	USB-A / 5.0 V; 2 A
Charging time	approx. 4 hours
Waterproof	IPX5
Operating temperature	-10°C to +55°C
Dimensions (L x W x H)	100 x 200 x 100 mm
Weight	810 g

## 15. Safety instructions

- Always make sure, the charging port cover is properly closed, to protect the device from moisture and humidity. Do not expose the device to water or other liquids while the charging ports are uncovered! Accidental penetration of liquids into the device can cause serious damage. Do not charge the device in wet environments!
- Do not remove the screws to reduce the risk of electric shock. The device contains no user serviceable parts. Entrust maintenance work to qualified personnel.
- Avoid both extremely high and extremely low temperatures. Do not place the device near heat sources such as radiators or gas/electric stoves.
- Please note that excessive sound pressure or high volume can damage your hearing. Do not use the device at high volumes directly next to your head. Please be aware of the high volume of the emergency siren function.
- Before cleaning the device, make sure it is unplugged from the charger.
- Never throw batteries and rechargeable batteries into fire as this can cause an explosion. Please dispose of empty batteries in the recycling bin, not in the normal household waste.
- Do not use scouring cloths or abrasive cleaning agents as these can damage the device surface.

## 16. Troubleshooting

Problem	Remedy
The device does not switch on	<ul style="list-style-type: none"> <li>• Make sure the radio is charged, by connecting it to a power source and charging for at least 30 minutes.</li> <li>• If the radio is charged but still does not switch on, press the reset button under the charge cover with a small object.</li> </ul>
No sound or low volume	<ul style="list-style-type: none"> <li>• Is the radio muted? Use the volume up button to increase the volume.</li> </ul>
No signal or hissing in DAB/FM mode.	<ul style="list-style-type: none"> <li>• Re-position the radio or change the antenna. Check that the antenna is fully extended.</li> </ul>
Some buttons/functions can no longer be used	<ul style="list-style-type: none"> <li>• Reset the radio to factory settings (see "10.5. Factory reset" on page 23).</li> <li>• Press the reset button under the charge cover with a small object.</li> </ul>

## 17. Warranty and recycling Information

We are obliged to include information on disposal, legal warranty provisions and EC declarations of conformity with instructions on the use of devices in various countries in the scope of supply of every device. This information can be found below.

### 17.1. Legal warranty for 2 years from the date of purchase

The seller of this device grants you a legal warranty of two years from the date of purchase of the device. This warranty covers all failures that occur due to defective components or faulty functions within the warranty period, other than failures resulting from normal wear and tear, such as used batteries, scratches on the screen, housing defects, broken antennas, as well as defects due to external effects such as corrosion, over-voltage due to improper external power supply or use of unsuitable accessories. The warranty also excludes failures resulting from improper use of the device.

In the event of a warranty claim, please contact the dealer from whom you purchased the device or our service partner without delay. The dealer will either repair or replace your device, or it will refer you to a specialist service centre.

If you send in your device, please do not forget your purchase receipt as proof of the date of purchase and describe the fault that occurred as accurately as possible.

## 18. Electronic waste law and recycling



European laws prohibit the disposal of defective or unusable devices in the household waste. If you want to dispose of your device, make sure you hand it over to one of the municipal collection points for recycling. These collection points are financed by industry and ensure the environmentally sound disposal and recycling of valuable raw materials.

### 18.1. CE declaration of conformity

#### Standards and directives



Alan Electronics GmbH hereby declares that the model DR 114 radio complies with regulation 2014/53/EU. The full text of the EU declaration of conformity can be found at the following Internet address:

[www.service.alan-electronics.de/CE-Papiere](http://www.service.alan-electronics.de/CE-Papiere)

### 18.2. Notes on battery disposal

The batteries used in this product contain environmentally harmful chemicals. To protect our environment, dispose of empty batteries according to local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact your local authorities or the dealer where you purchased the product.

## 19. Service address and technical hotline

**Alan Electronics GmbH**  
**Service**  
**Daimlerstraße 1g**  
**D-63303 Dreieich**  
**Germany**

You can call our service hotline at **+49 6103 / 9481 - 66** (at a fee of the German landline network) or email us at [service@albrecht-midland.de](mailto:service@albrecht-midland.de).

Before you send us back a supposedly defective device in the event of a problem, you can save your time and shipping costs by performing a few simple tests (see chapter "16. Troubleshooting" on page 27) or use our hotline service for support.

Print errors excepted.

© 2022 Alan Electronics GmbH, Daimlerstr. 1g, 63303 Dreieich, Germany